

# PROOFER DOOR GASKET REPLACEMENT INSTRUCTIONS

FOR SUBWAY MODELS OP-2FM, OP-3FM, SUB-123 & SUB-123P

Subway oven proofers may occasionally need the proofer door gasket replaced. Call NU-VU service at 800.338.9886, option 1 for replacement parts.

1. Open the proofer door. You may:

- A. Place a piece of cardboard or non abrasive material between the proofer door and the face of the cabinet to help prevent the door from damaging the face of the proofer.

OR

- B. Remove the door and place it on a covered flat surface (Fig. A)



Fig. A



Fig. B

2. Remove the gasket by pulling it out from the door frame (Fig. B). You use a flat head screw driver in the corner of the door to help start the gasket. Make sure that you don't leave any part of the gasket in the door frame. NOTE: To simplify the replacement process, NU-VU supplies the replacement gasket as a single pre-formed gasket. It is designed for low temp application and is not intended for use on the oven part of the cabinet.



Fig. C



Fig. D

- 3. Place the formed gasket over the slot in the face of the door frame and press it firmly into place (Fig. C&D). If the gasket does not seem to press easily onto the track, you can use a small rolling device.
- 4. Wipe down the door gasket and allow to dry before use.
- 5. If removed from the cabinet, reinstall the door.



5600 13th St  
Menominee, MI 49858  
800.338.9886  
service@nu-vu.com