


## CONTROL OPERATION

Press the on/off rocker switch to the on position





After a few seconds the screen below will display.

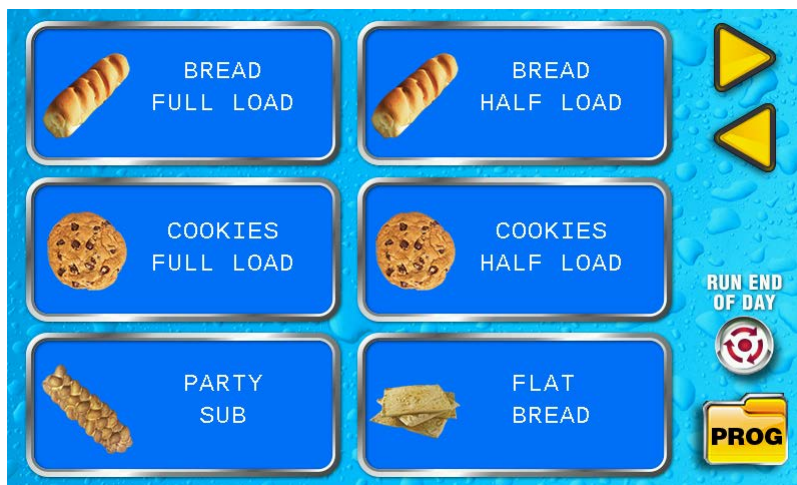



Press the recipe icon that you would like to run. The oven will begin to preheat to stage 1 temperature.



When preheat temperature is reached the Start icon will appear. The oven is ready to load the product. Please follow the pan orientation on the screen when loading. Listed below are the current recipe selections. The pans are loaded landscape and centered on half load recipes.

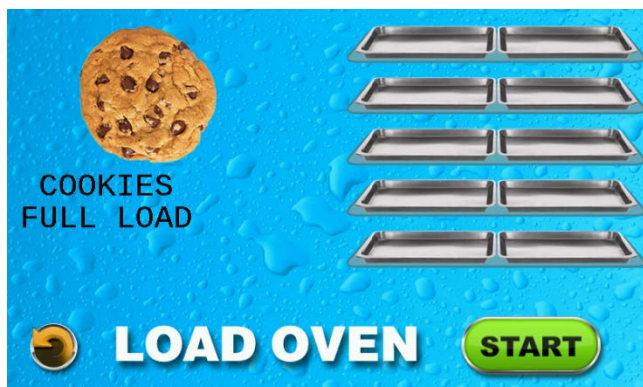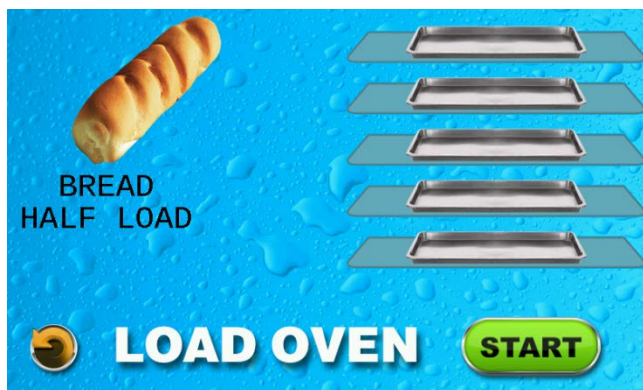



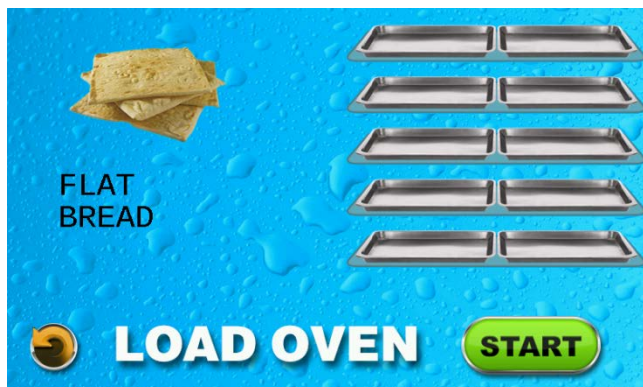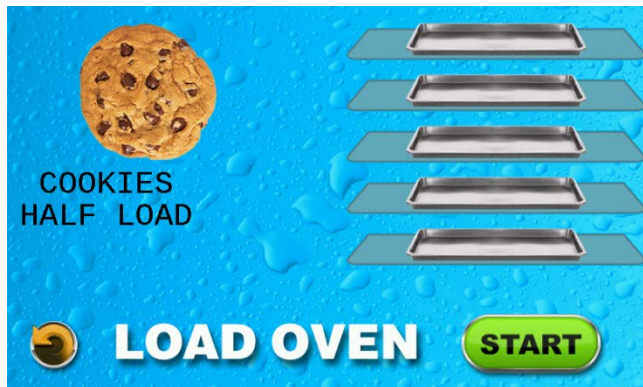


Touching the Start icon will run the recipe selected.



You will see an ADD CHEESE prompt at the 19 minute mark. It will sound the alarm for 1 minute every 15 seconds. If you are going to add cheese, open the door, add cheese, load pans, and close door. If no cheese is required disregard the alarm and it will continue running recipe.



You can stop the recipe at any time by touching the Cancel icon. It will display a prompt asking if you are sure you want to stop the recipe. Selecting yes will bring you back to the main menu. Selecting no will continue running current recipe.

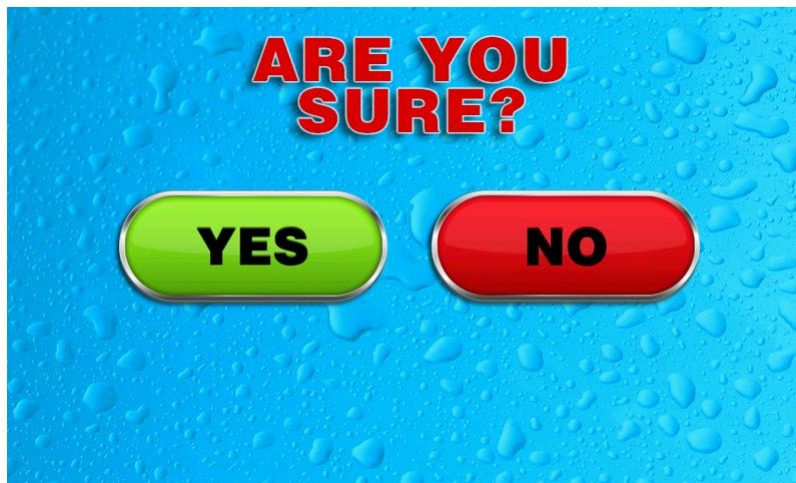

The control will run cool down mode if the recipe selected set temperature is lower than cavity temperature.




When cavity temperature reaches recipe set temperature the start icon will appear.





## Run End of Day

Please select Run End of Day icon from the main menu screen when completed with baking until the next shift. It will heat up to 350 degrees.

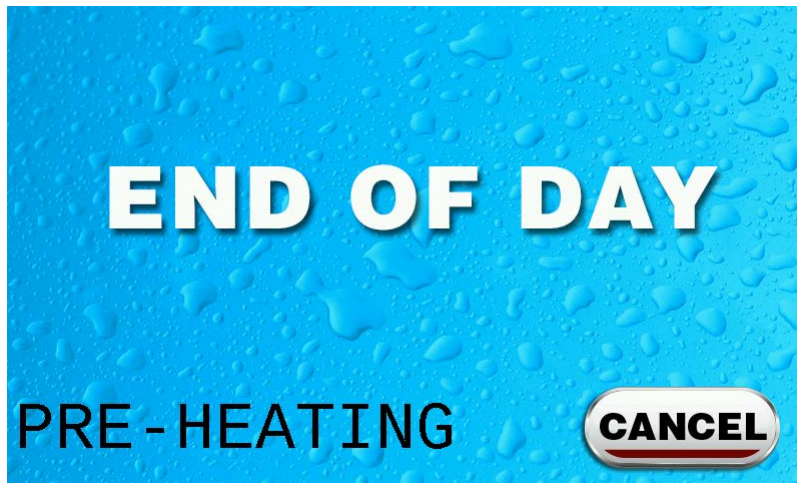

After reaching 350 degrees it will run for 25 minutes removing any residual moisture from the unit. You can cancel at any time to return to the main menu screen.



When completed the alarm will sound to turn power off

